



Congratulations on acquiring a Lytt Labs timepiece. You and your timepiece are going to have a lot of great times together. Your timepiece has been manufactured using the finest materials and has been subject to stringent quality control. To enjoy your Lytt Labs timepiece for a long time to come, please make sure to read the following care and use instructions.

## LYTT LABS USER MANUAL AND CARE GUIDELINE

### 1. PROPER CARE & USE

Things not to do ! :

Your Lytt Labs timepiece is made to the highest standards and is meant for normal use. IT IS NOT a sports watch. Therefore, avoid using it for high impact sports such as tennis, golf, motorsports, etc. Neither the movement nor the case is designed to withstand the type of impact these activities may generate.



Things to do with care :

Your timepiece is 50m / 5 atm water resistant. It is NOT WATERPROOF. It is fine to wash your hands or to take a shower. It is NOT a diving watch. Temperature shocks (hot to cold, cold to hot)

can also damage the gaskets in your timepiece. Therefore, please ensure your watch does not experience rapid changes in temperature extremes.

Should soap, shampoo or an unwanted substance come in to contact with your watch, please rinse it off with warm water, as soap and shampoo contains elements that may damage the gaskets and silicone parts of your watch.



#### Things to do :

Clean your timepiece from time to time, using a soft microfibre cloth and warm water. DO NOT use an abrasive cloth as this can lead to unwanted scratches. For more persistent stains, we recommend using a diluted ammonia based glass window cleaner (3:1 dilution). Moisten a soft cloth with this solution and rub the stained surface with it. Wipe again with a moistened cloth with water to remove the solution. Should you need help with cleaning your watch, please ask your trusted retailer for a professional cleaning. Most retailers will provide this service free of charge as a courtesy.

## 2. SET AND WIND :

### Wind

---

Your Lytt Labs timepiece is equipped with a mechanical self-winding movement. Wearing it daily with a normal level of activity will provide all the energy the timepiece requires to keep proper time. Should you have periods with very low levels of activity - a desk job or a lazy weekend - we recommend that you manually wind your watch to give it a boost. A few dozen turns of the crown should fully charge your timepiece. Please keep in mind that the winding is one-directional, so you will want to wind your watch in a clock-wise manner.

*For power reserve details please refer to the technical specifications of your timepiece.*

### Set

---

Crown pushed in : Timepiece is secure and operational. Timepiece is water resistant.

Crown pulled out position 1 : No function

Crown pulled out position 2 : you are recommended to set the time by turning the crown in clockwise direction. The second hand is blocked while you set your timepiece. The full hour is reached when the color indicator at 10 o'clock points directly at any given hour, and the indicator at 2 o'clock directly at the "Zero" on the minute disk, as per Figure 1. The vertical bars on the hour disk indicate half hours.



Make sure to push the crown back into the fully closed position after setting the time to ensure the water resistance of your timepiece.

### **3. CHANGING YOUR STRAP :**

Your Lytt Labs timepiece can be pimped with a wide choice of cool straps, in silicone or leather. These are available on our website or your trusted retailer. Make sure to check our website regularly for new strap options.


Each strap is shipped with a new set of screws and a screwdriver which is required to remove the old strap and to secure the new strap.

Make sure to use the screws that were shipped with your new strap. Assemble as follows:

- Insert new screws into strap until they are “flush” with the strap.
- Position the strap – The short end belongs on the side of the watch where the QR code is. The long end of the strap belongs on the side with the Lytt Labs logo.

Don't force the screws in, but use the screwdriver (included with your timepiece) to reassemble the watch and strap ensuring the threads are aligned before tightening.

Do not use excessive force when tightening the screws. Stop as soon as you feel resistance. The screw threads on the case are highly precise and may get damaged if the screw is over tightened. Damaged screw threads from over tightening the strap to the case is not covered under warranty. If you are not confident of changing the straps on your own, please bring the watch to your trusted retailer or a watchmaker to change the straps for you.

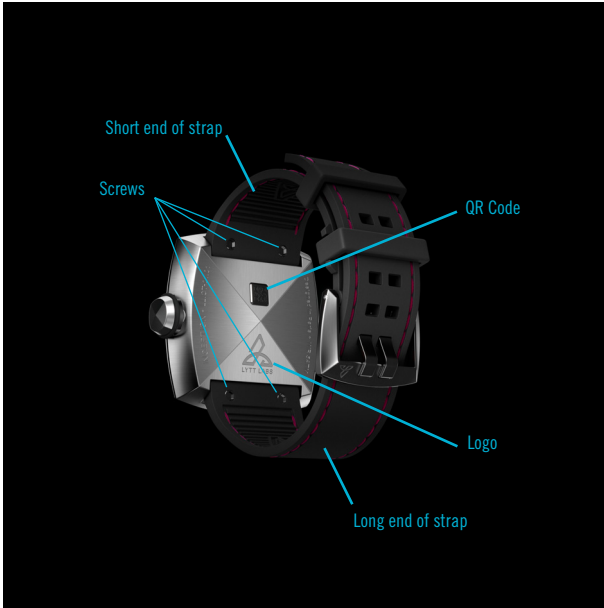

Short end of strap

Screws

QR Code

Logo

Long end of strap

## 4. QR CODE

Your Lytt Labs QR code (on the back of the watch) guarantees that you have acquired an authentic Lytt Labs timepiece. It is your access code to unlock special offers, community events and special benefits. It will also allow you to access our Warranty system in the unlikely event that you have a problem with your Lytt Labs timepiece and need to send it back to us for warranty repair or servicing.

Scanning it will take you straight to our website [www.lyttlabs.com](http://www.lyttlabs.com). We recommend using one of the following free scanners for your smartphone: INIGMA or QR CODE READER BY SCAN (available for free in your app store). A more extensive list can be found on our website.

Contact: [customercare@lyttlabs.com](mailto:customercare@lyttlabs.com)

[www.lyttlabs.com](http://www.lyttlabs.com)